



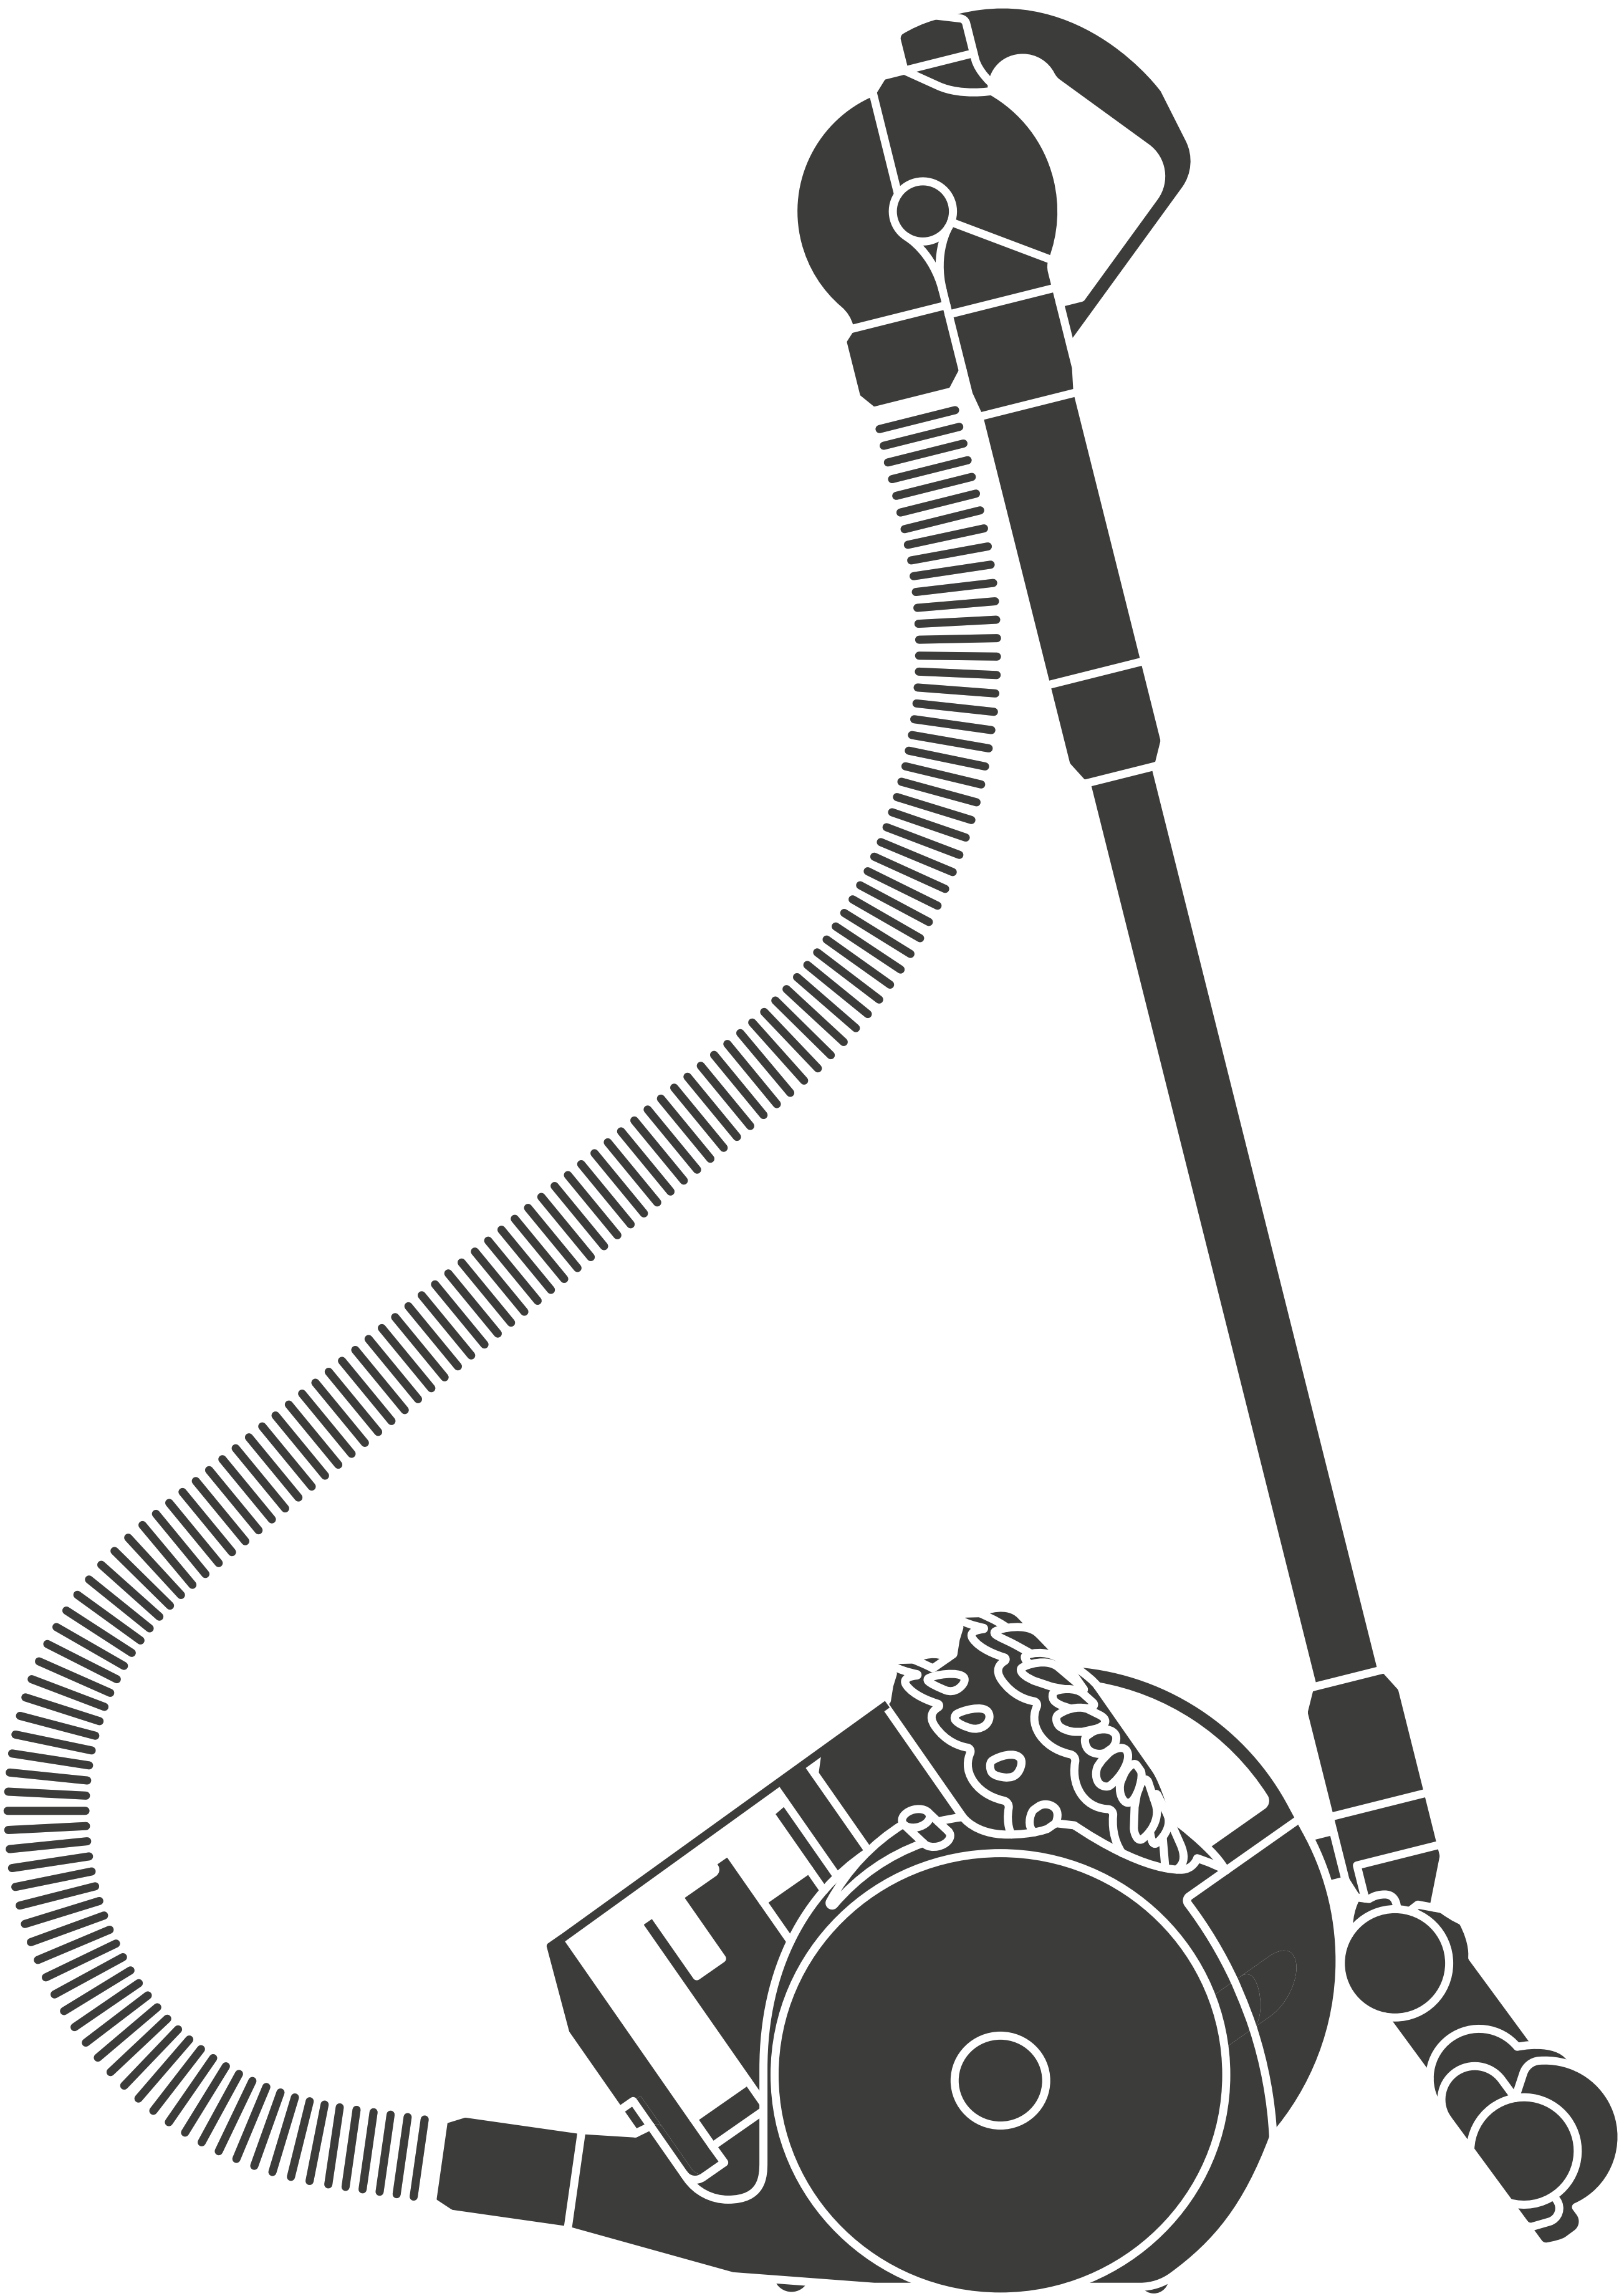


Contents


- In the box
- Getting started
- Downloading the MyDyson™ app
- Caring for your floors
- Emptying your bin

- Cleaning your bin
- Clearing blockages
- Cleaning your tools
- Cleaning the Mini motorised tool
- Carrying and storage

In the box

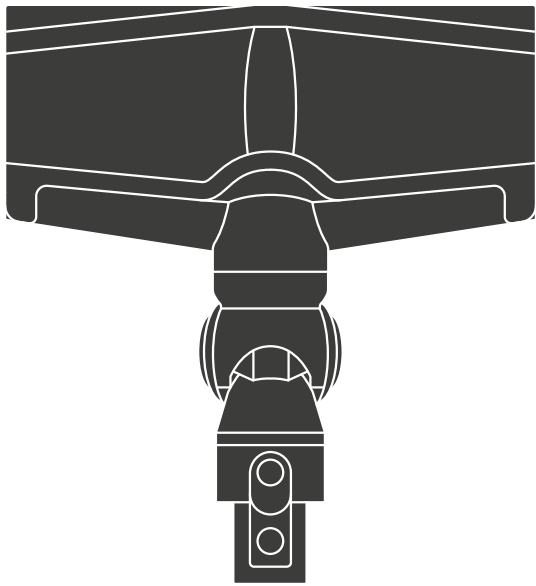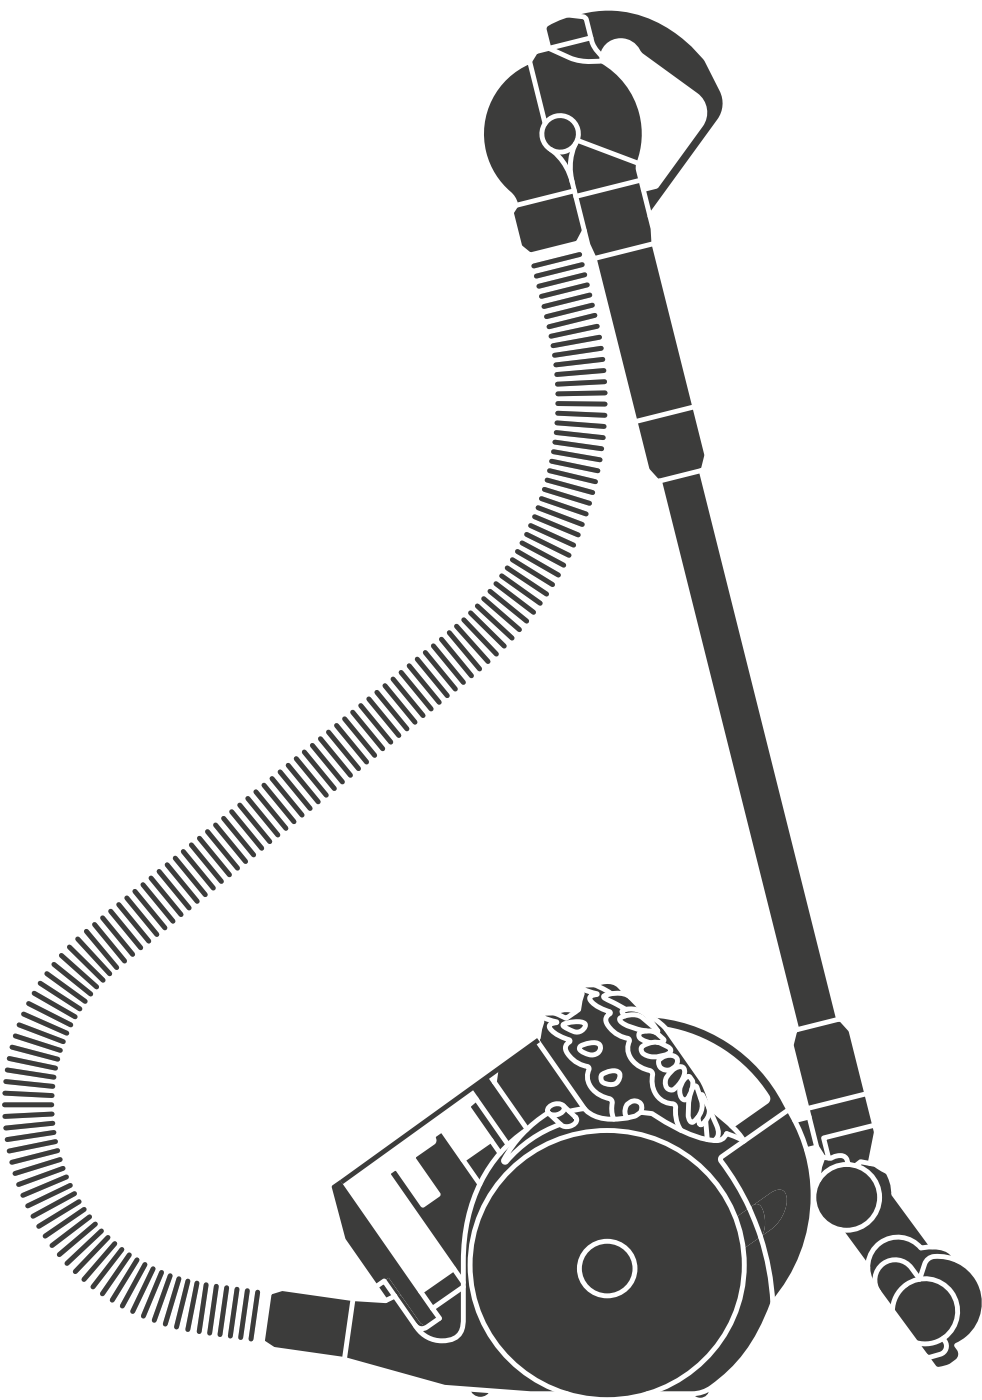


De-tangling conical cleaner head
Dual conical brush bars remove and de-tangle hair. Laser-like light reveals hidden dust.

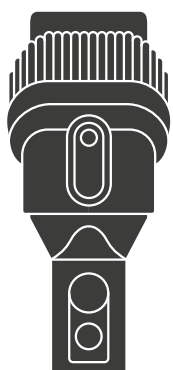

Combination tool
Two tools in one – brush and wide nozzle. For simple switching between tasks.



Crevice tool
Engineered for precise cleaning around tricky edges, narrow spaces and into hard-to-reach corners.

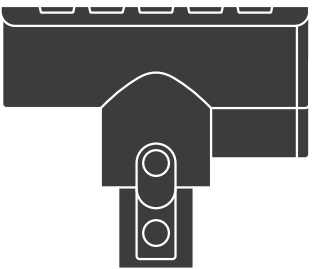


Mini motorised tool
Motorised brush bar, concentrated in a smaller head to remove stubborn dirt from mattresses, upholstery and stairs.



Tool clip
Handy storage for your vacuum's tools. So they're always there when you need them.

Additional tools and kits can be purchased at [Dyson.com](https://www.dyson.com)

Getting started

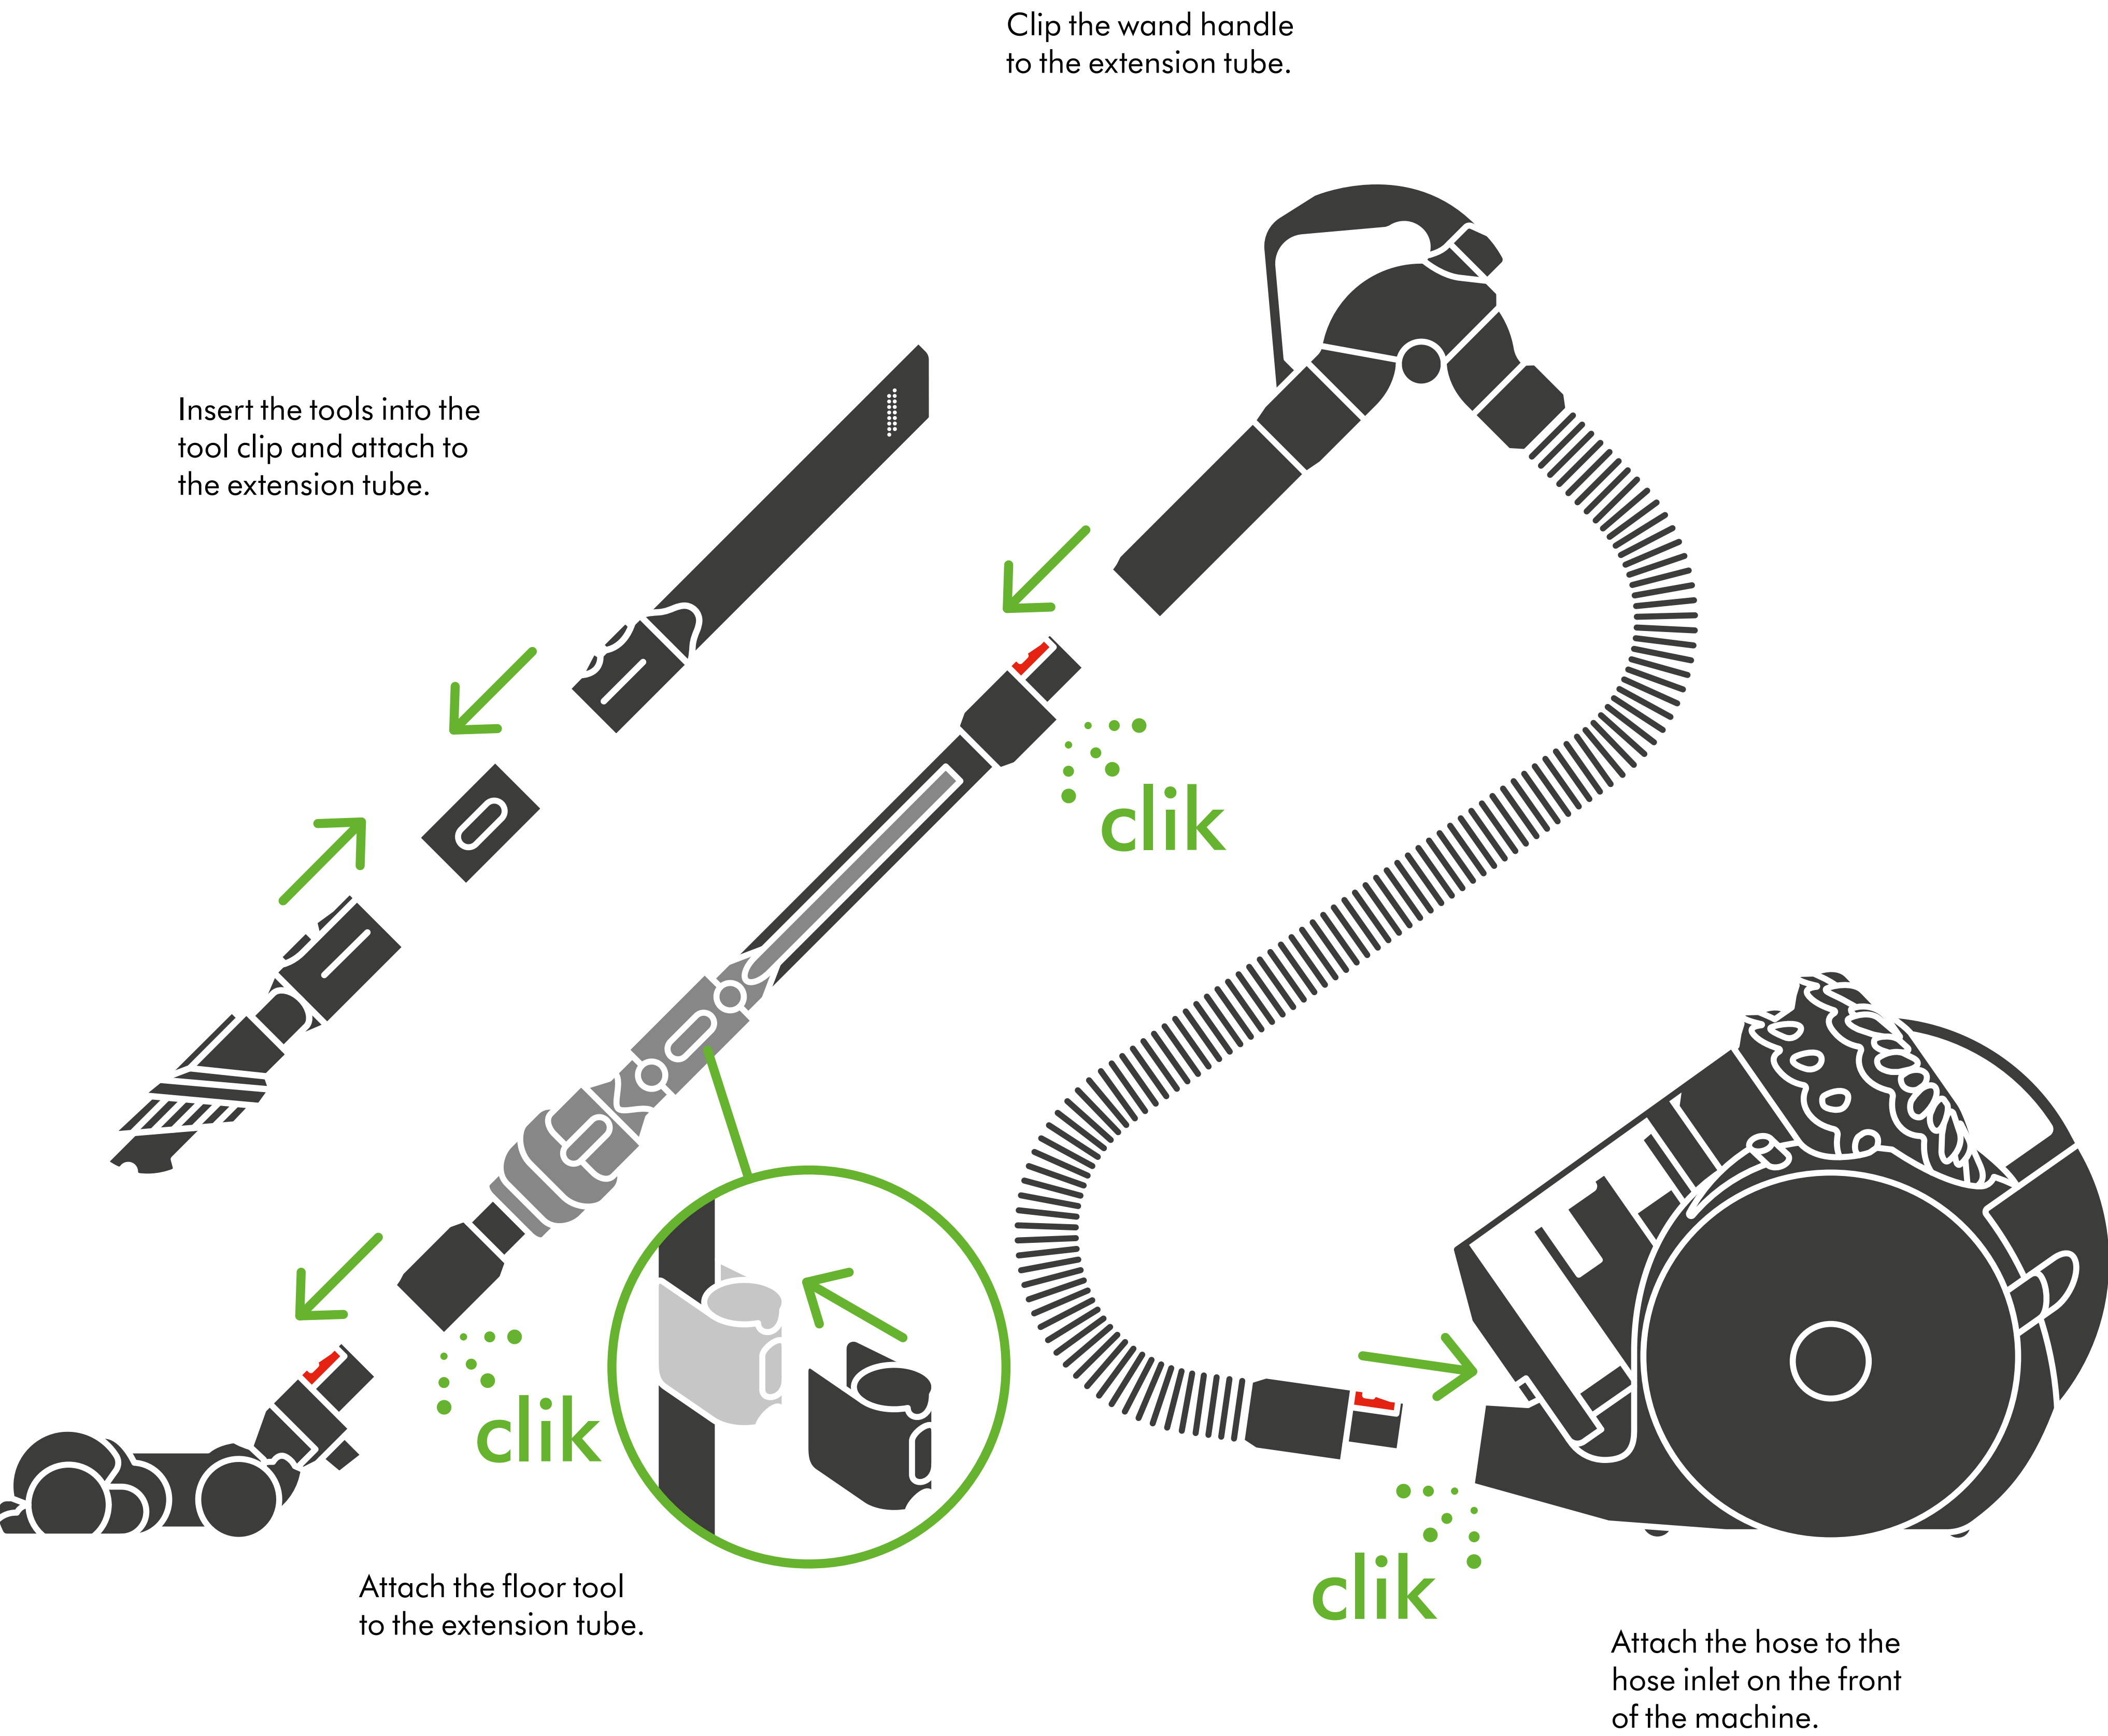


Download the MyDyson™ app

With features to help you get more from your machine.

Easily manage your product, enjoy personalised features and get expert support – right at your fingertips.

Open the app, create an account and tap 'Add a product.' Then follow the steps to register your machine.

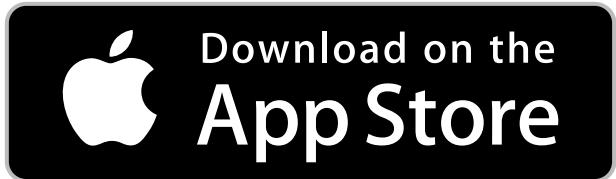

Caring for your floors

Check that the underside of the cleaner head or tool is clean and free from any objects that may cause damage.


Before vacuuming your flooring, rugs, and carpets, check the manufacturer’s recommended cleaning instructions.

The brush bar on your machine can damage certain carpet types and floors. Some carpets will fuzz if a rotating brush bar is used when vacuuming. If this happens, we recommend vacuuming without the motorised floor tool and consulting with your flooring manufacturer.

Emptying your bin


Ensure the collected debris doesn’t exceed the max line.

Detach the vacuum’s bin by pressing the red release button at the top/rear of the clear, branded bin handle.

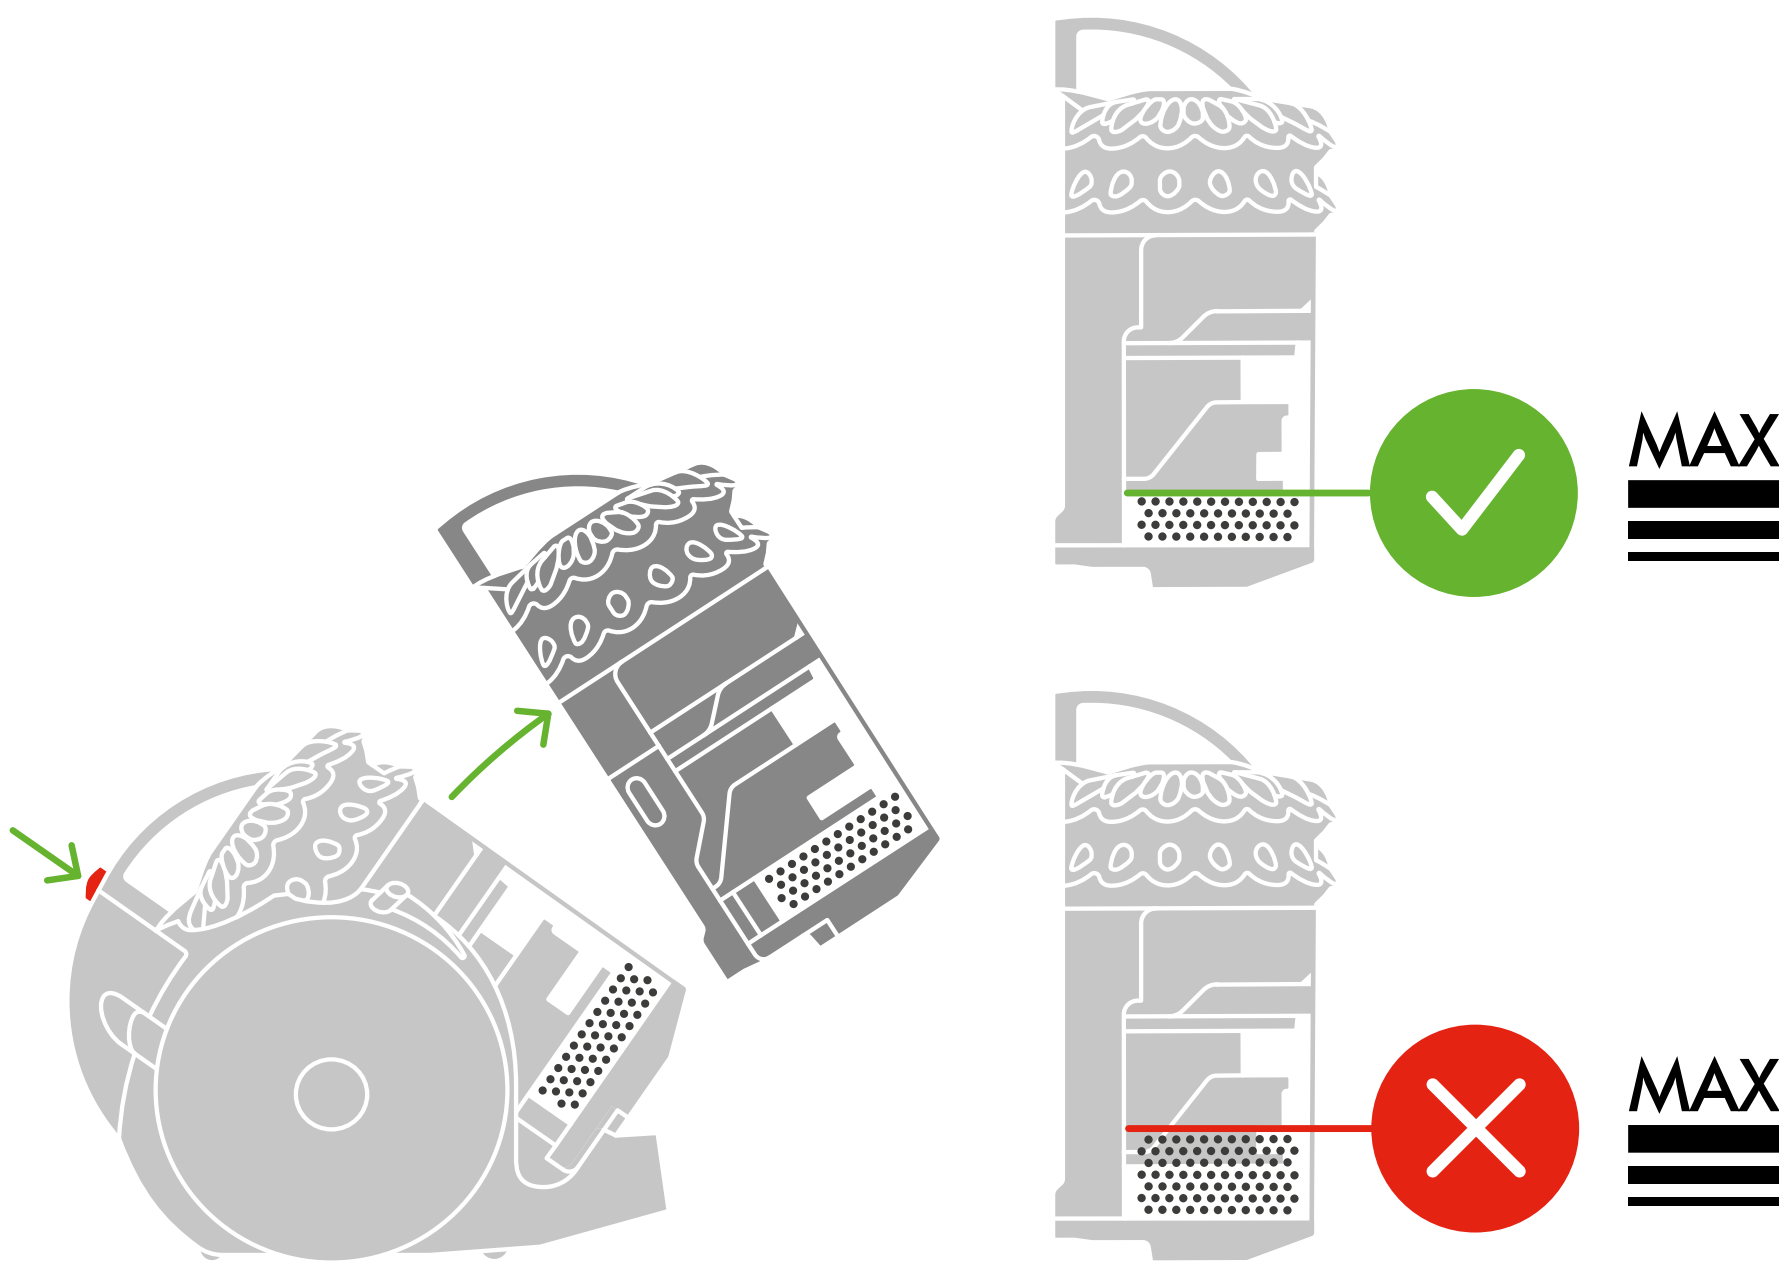

Place the bin above your home rubbish bin.


Press the red button down again to release the bottom lid.

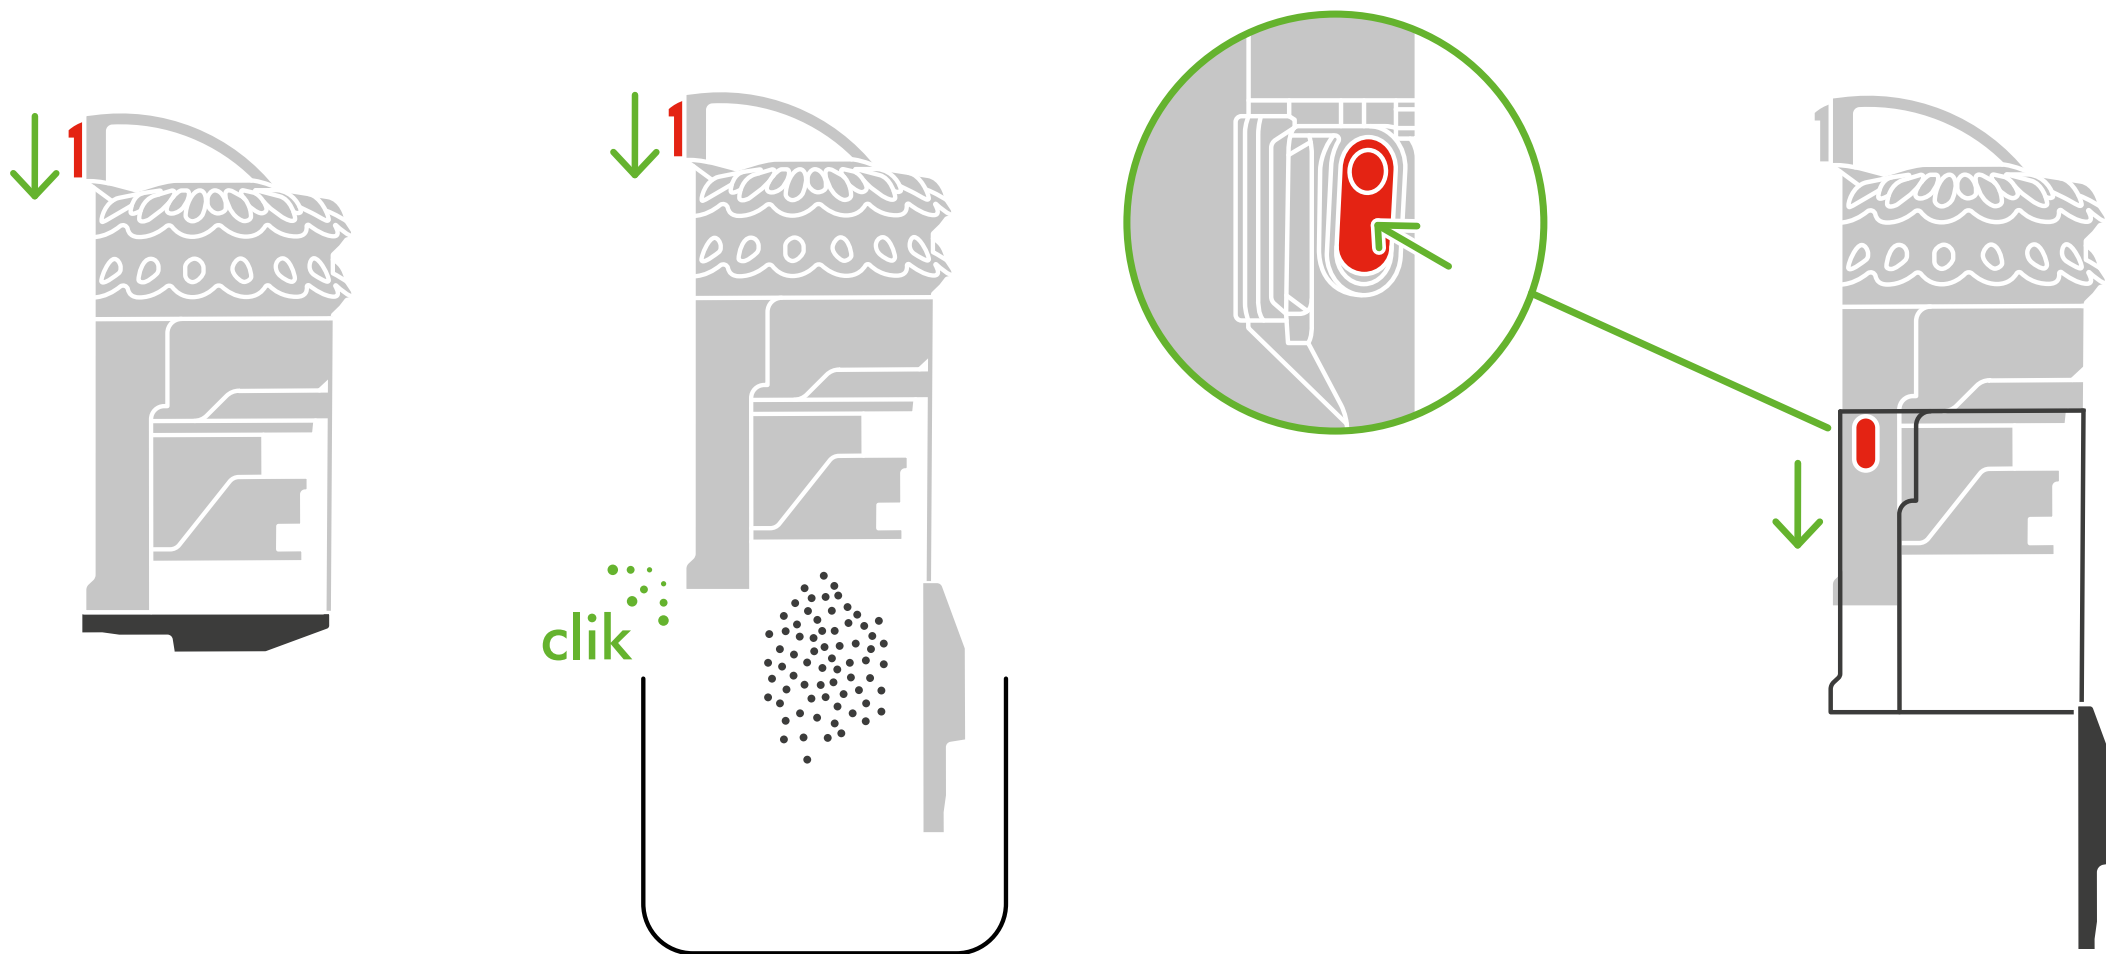

Cleaning your bin

Press the red button down to release the bottom lid.


Release:
Press the red catch behind the red release button to slide the entire clear bin off the vacuum.

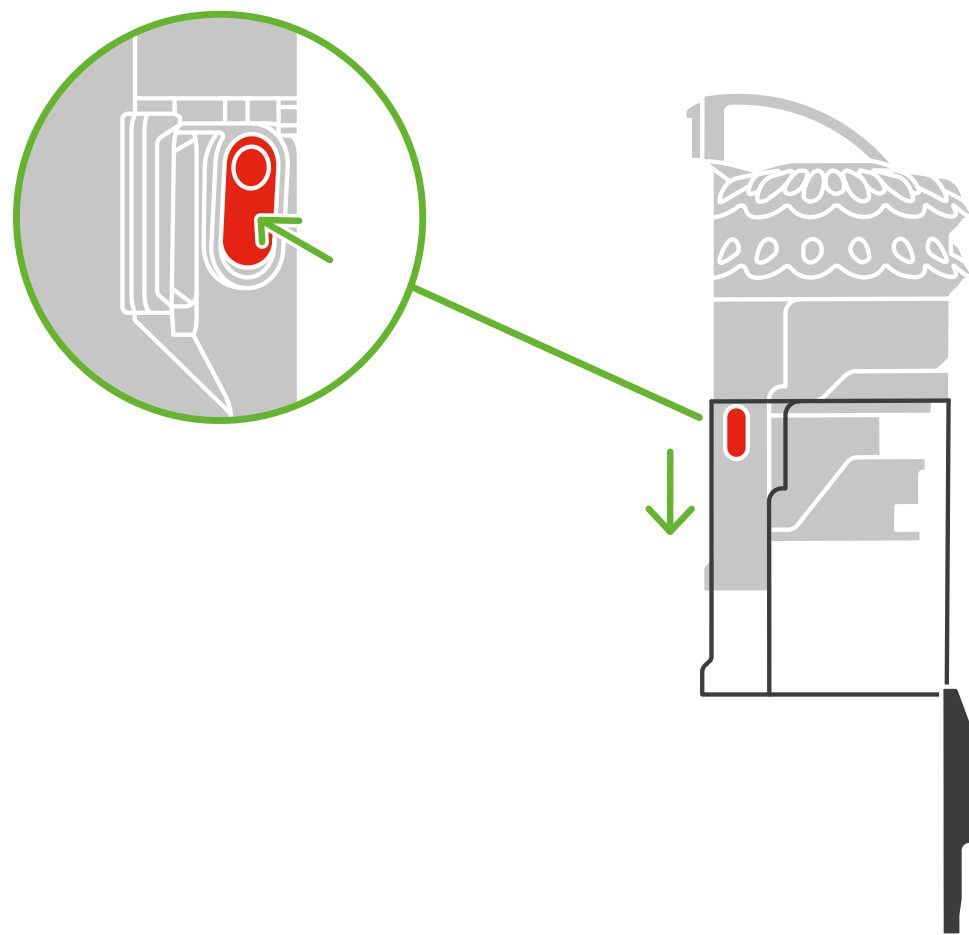

Wipe the Cyclone:
Use a dry cloth to gently wipe around the cyclone shroud.
Never submerge the cyclone assembly in water.



Wash:
Clean the clear bin using cold water only. Do not use dish soap, polishes, or air fresheners on the plastic, as this can cause cloudiness or damage.

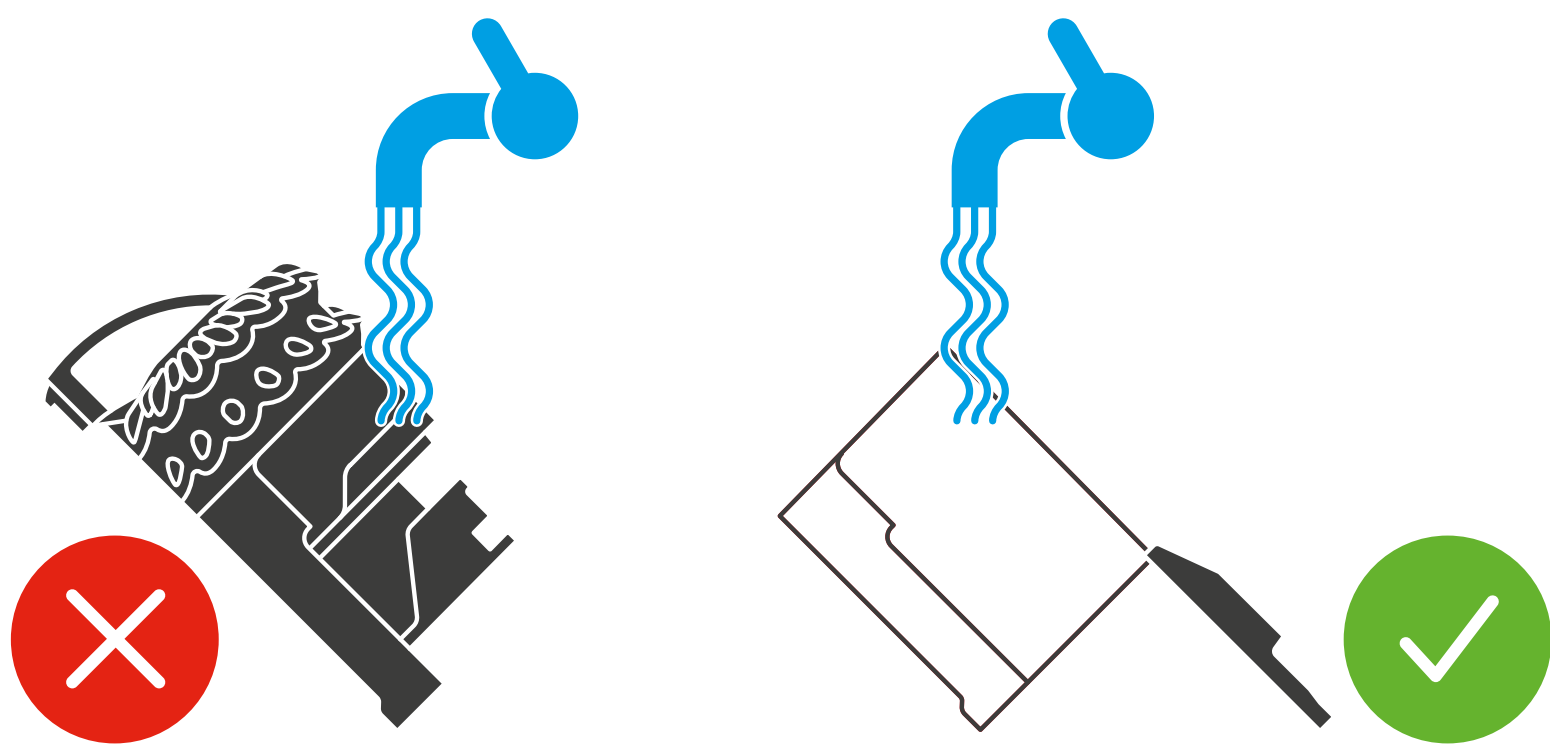

Dry:
Dry the bin with a microfibre cloth and leave it to air-dry for a few hours.
It must be 100% dry before reattachment.

Clearing blockages


Clearing blockages from the cleaner head:
Your De-tangling conical cleaner head doesn't have a washable brush bar. To maintain optimum performance, check your brush bars regularly and clear obstructions.

Make sure your machine is unplugged before starting any maintenance.

Don't put any part of your machine in a dishwasher or use detergents, polishes or air fresheners.

1. Remove the cover and brush bars
Lift the plastic clips at the back of the cleaner head on the left and right to release the cover.


Twist and pull each brush bar to remove.

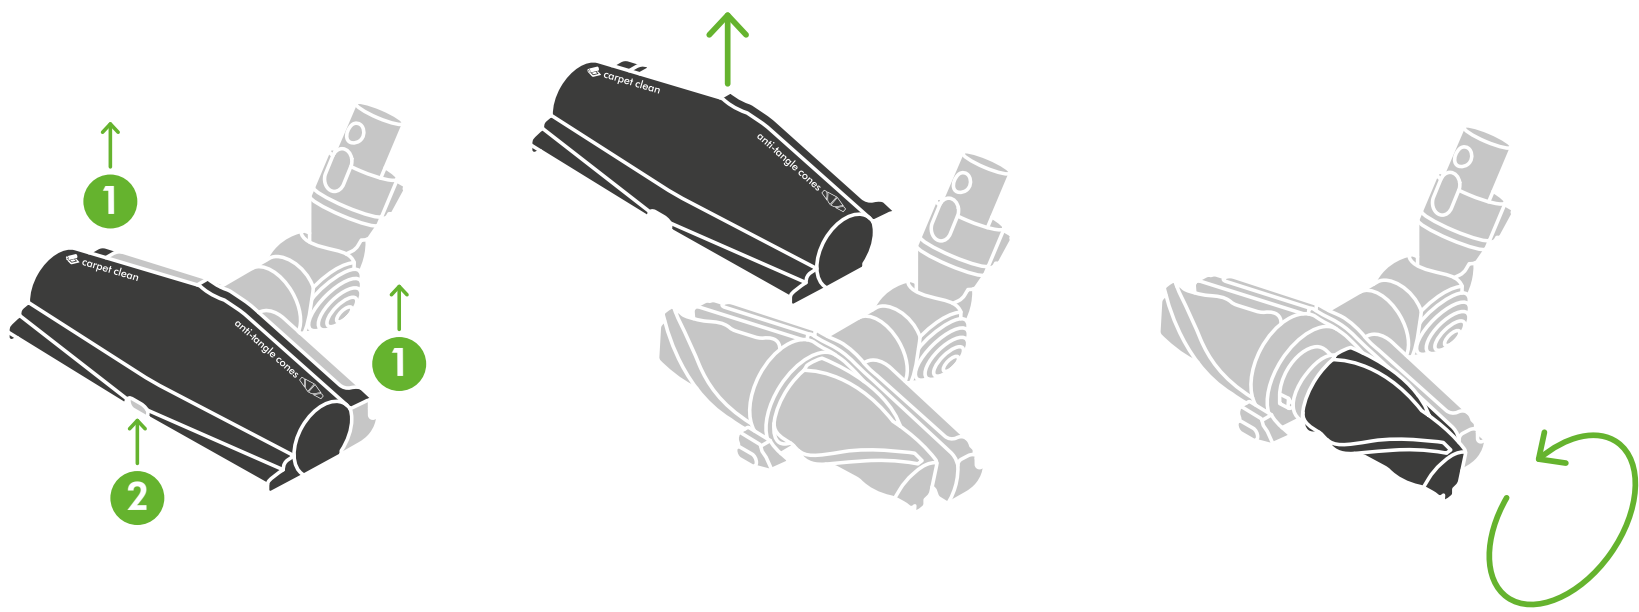

2. Look for obstructions
Clear any debris from your brush bar.


Check inside the cleaner head and remove any debris or blockages.

Your De-tangling conical cleaner head and brush bar aren't washable. Wipe over with a damp lint-free cloth.

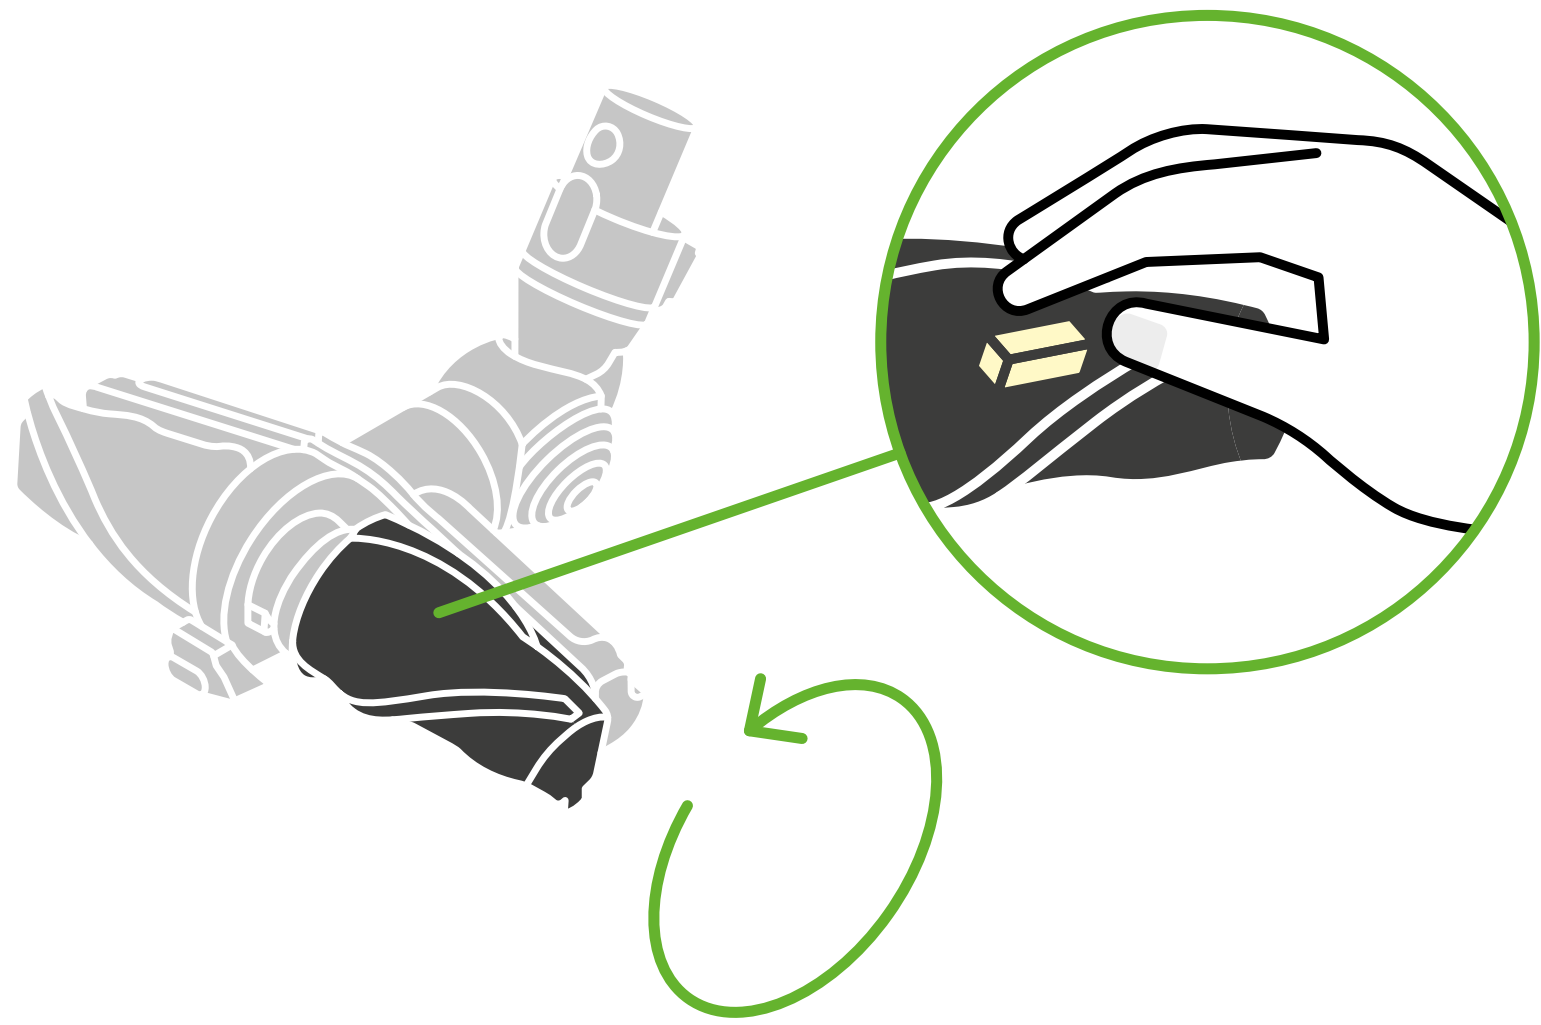


3. Re-assemble the De-tangling conical cleaner head
Reattach each brush bar by matching the colour of the plastic fitting on the cone to the same colour of the cleaner head.

Refit the cover by gently slotting back into place and snap the clips back into place.

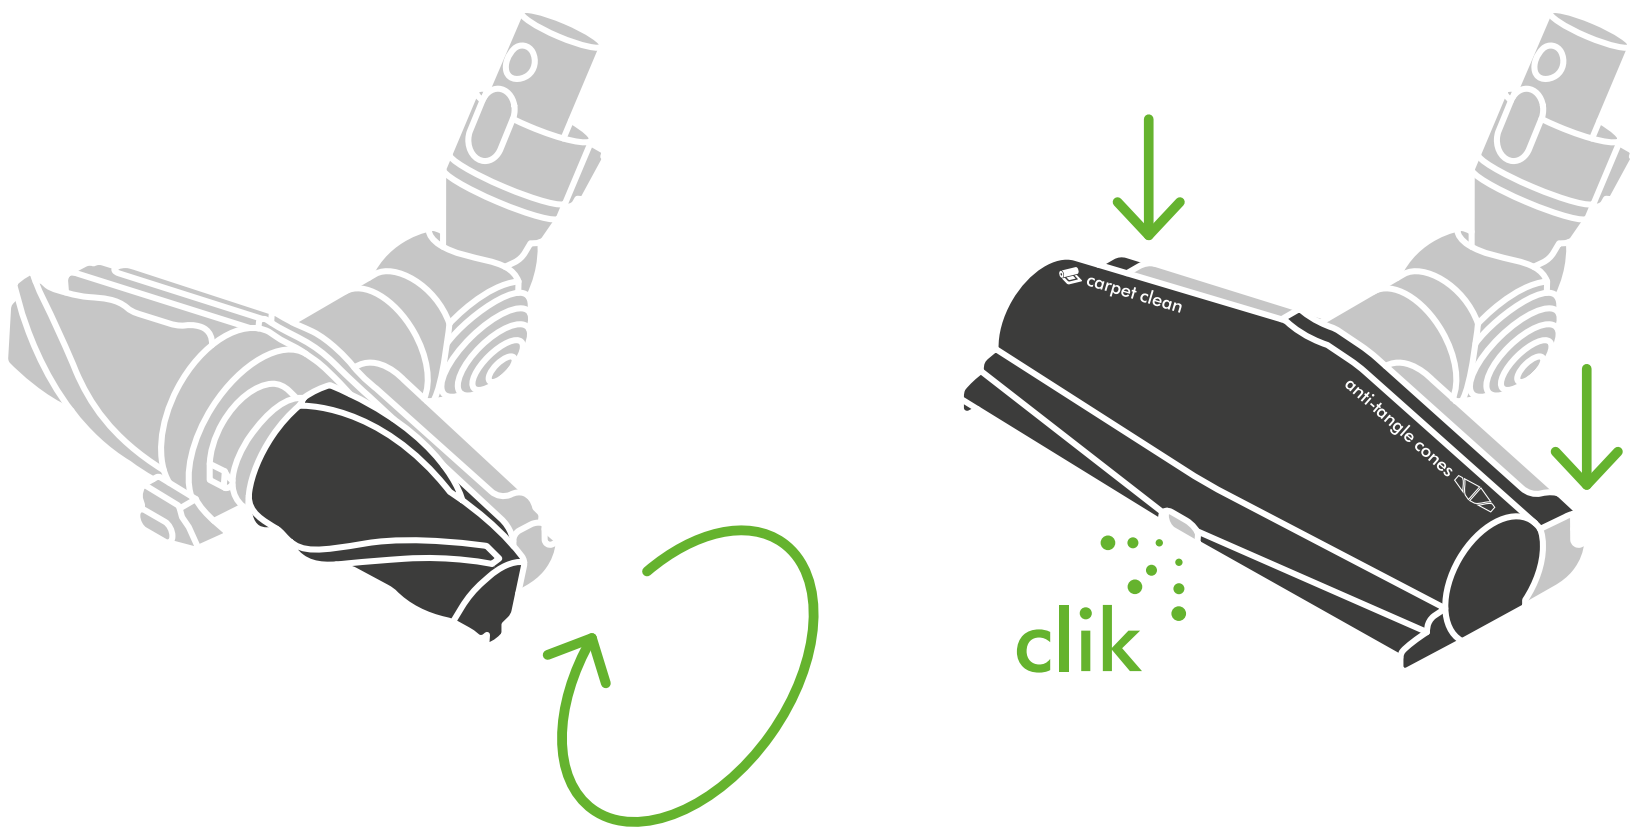


Clearing blockages from wand and hose:
Press the release button to remove the wand from the hose and floor tool.


Look through both ends of the wand to find trapped debris. Use a long stick or straightened wire coat hanger to gently push out any clogs.

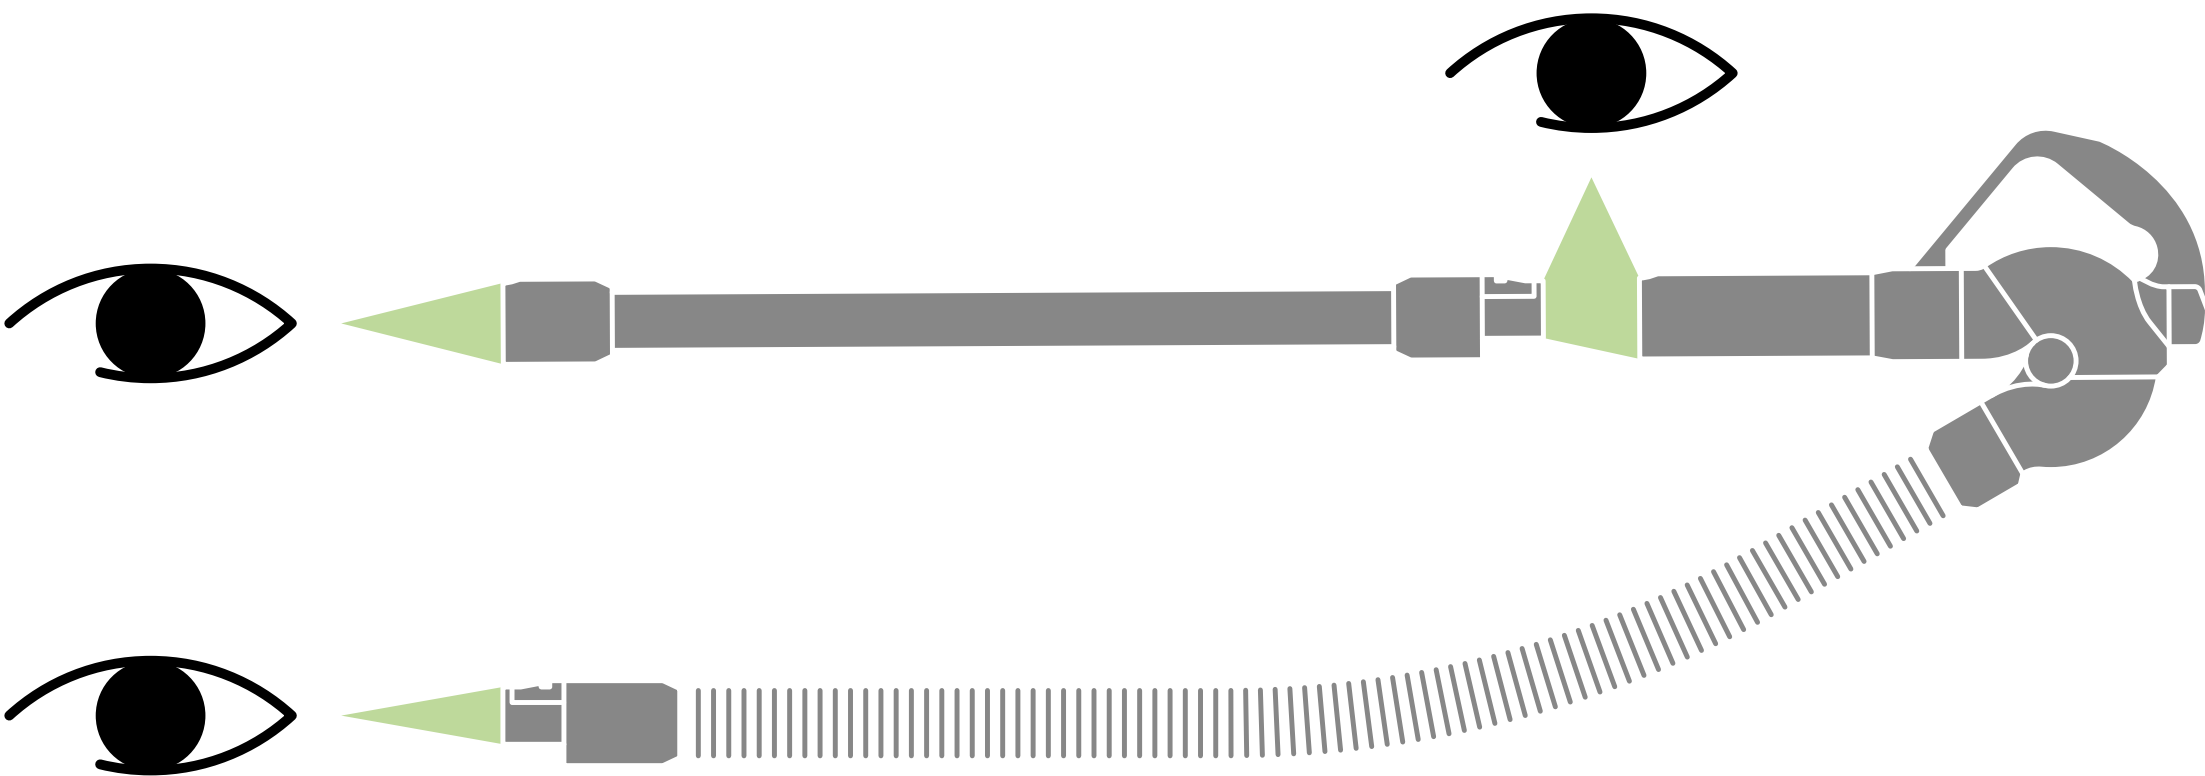


Inspect the floor tool:
Disconnect the floor head from the wand. Check the neck of the floor tool for trapped dirt. Turn the tool upside down and ensure nothing is blocking the suction inlet.

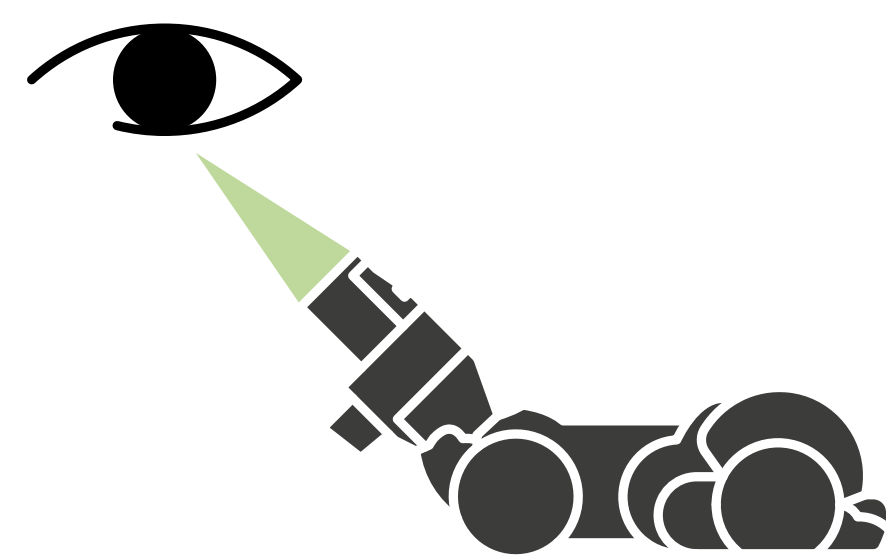

Empty the dust bin:
Detach the bin from the cylinder. A full bin stops airflow. Empty the dirt into a rubbish bin. Look inside the cyclone inlet where the bin attaches for trapped debris.

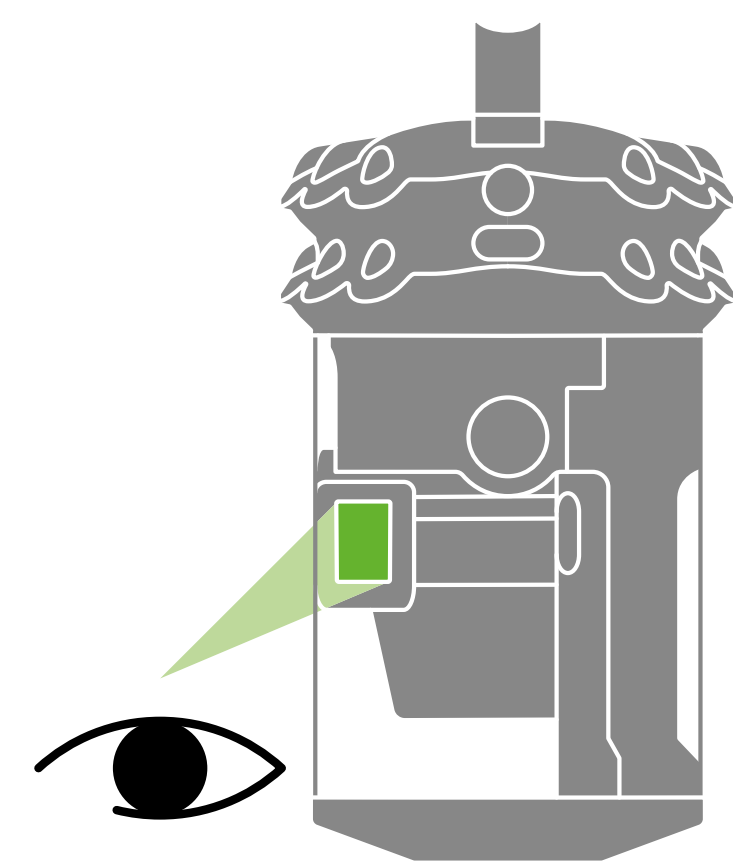

Inspect the ball casing:
Your vacuum’s main body (the ball) holds internal airways. Recline the machine and use a coin or screwdriver to remove the access cover on the ball. Check this inner airway for any clogs.

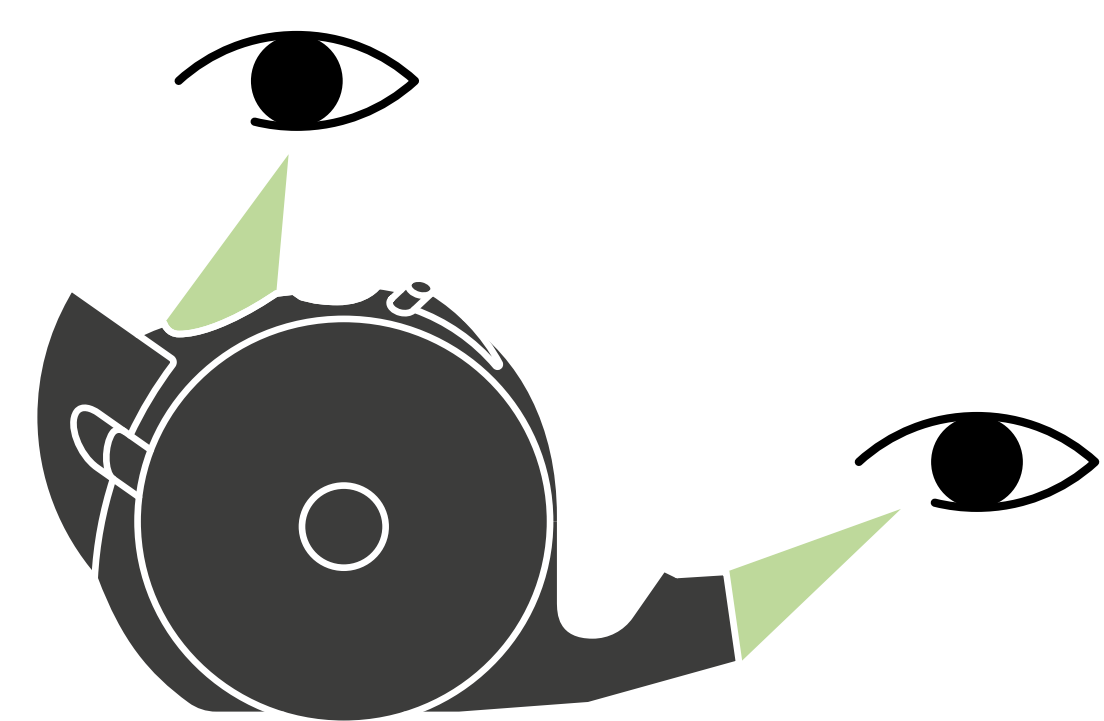

Cleaning your tools

Don’t put any part of your machine in a dishwasher or use detergents, polishes or air freshners.


Wipe with a damp, lint-free cloth without touching the connector end.

Make sure your tools are completely dry before using.


Cleaning the Mini motorised tool

With the Quick-release Mini motorised head removed from the machine, turn it over and undo the fastener. Locate the end cap and using a coin, turn it anti-clockwise a quarter of the way. This will allow you to remove it.


Note:
There should be a small padlock icon along with directional arrows to help you unlock the end cap.

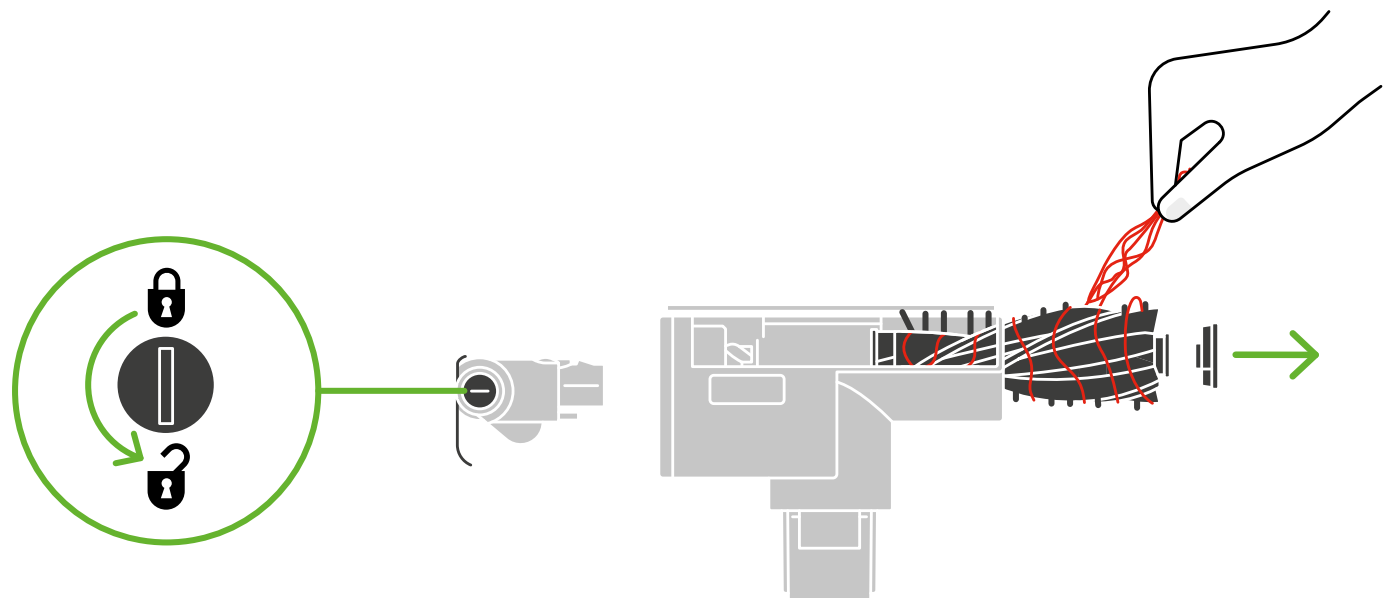

Remove the brush bar from the Quick-release Mini motorised head and clear away any hair or fibres. Check the neck of the cleaner head (where the cleaner head connects to the wand) for any blockages. Ensure there is no build-up of dust or debris in the small crevice between where the brush bar sits and the neck of the cleaner head.

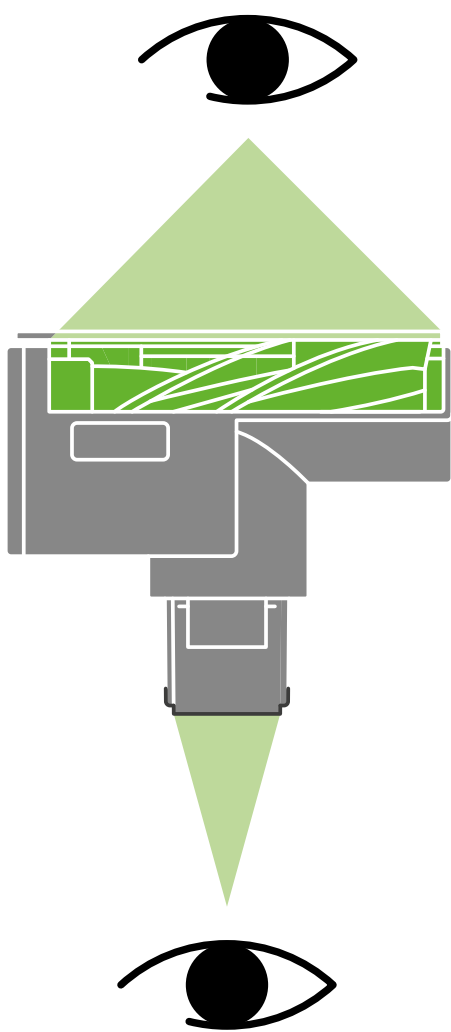

The brush bar, now clear of any debris, can be reinserted into the cleaner head. Securely fasten the end cap.

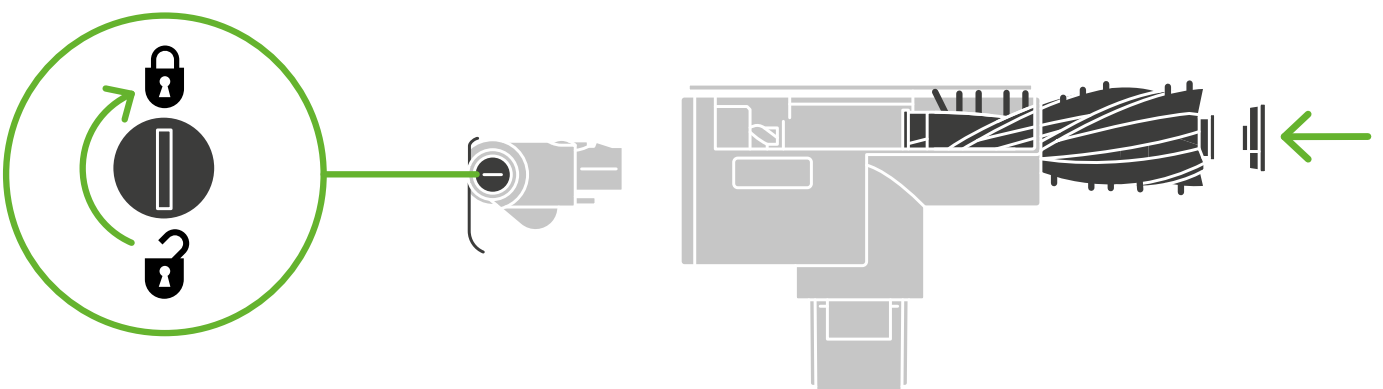

Carrying and storage

Use the integrated handle for easy carrying.
Secure the wand to the machine for storage.

